


A12 Update

How-To Guide

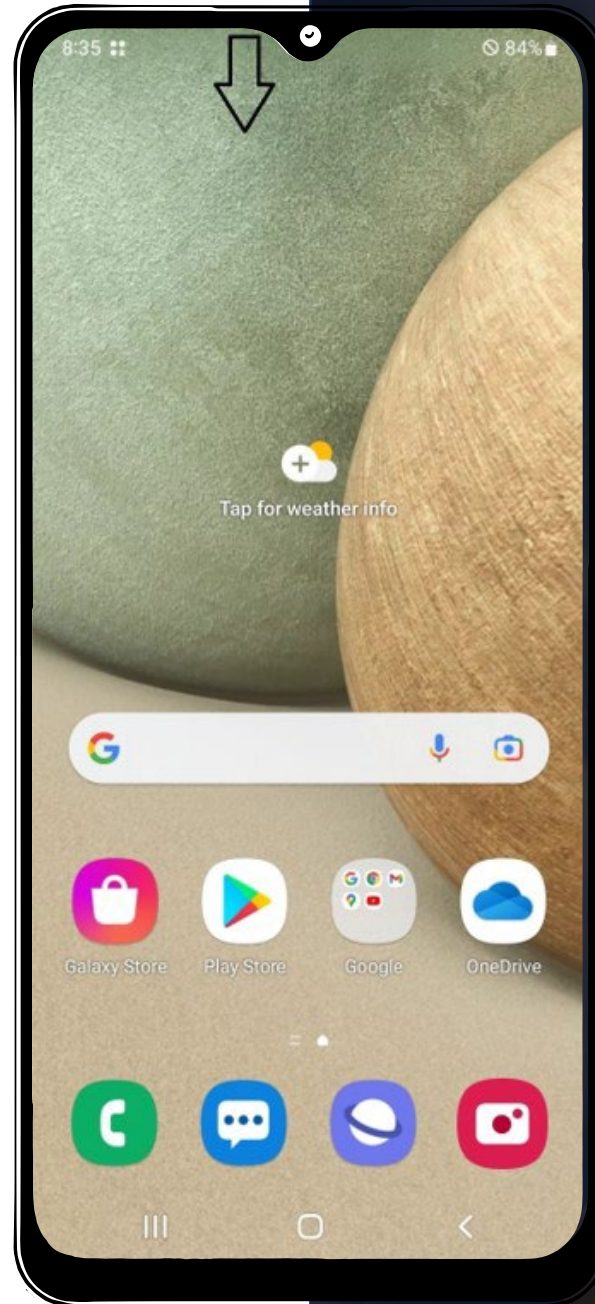


1. Swipe Down from the Top of Device
Swipe down from the top your device and a menu will open displaying your notification tray.

INLAND CELLULAR

A12 Update

How-To Guide

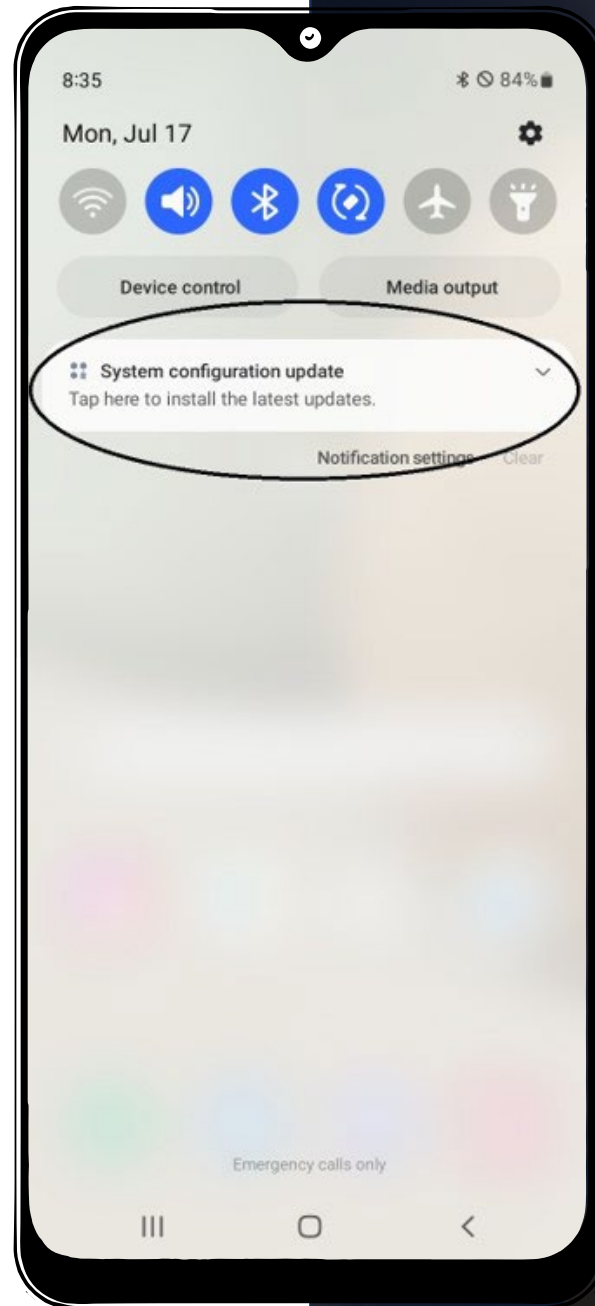


2. Install Configuration Update

Tap the notification to begin installing the configuration update

INLAND CELLULAR

A12 Update

How-To Guide

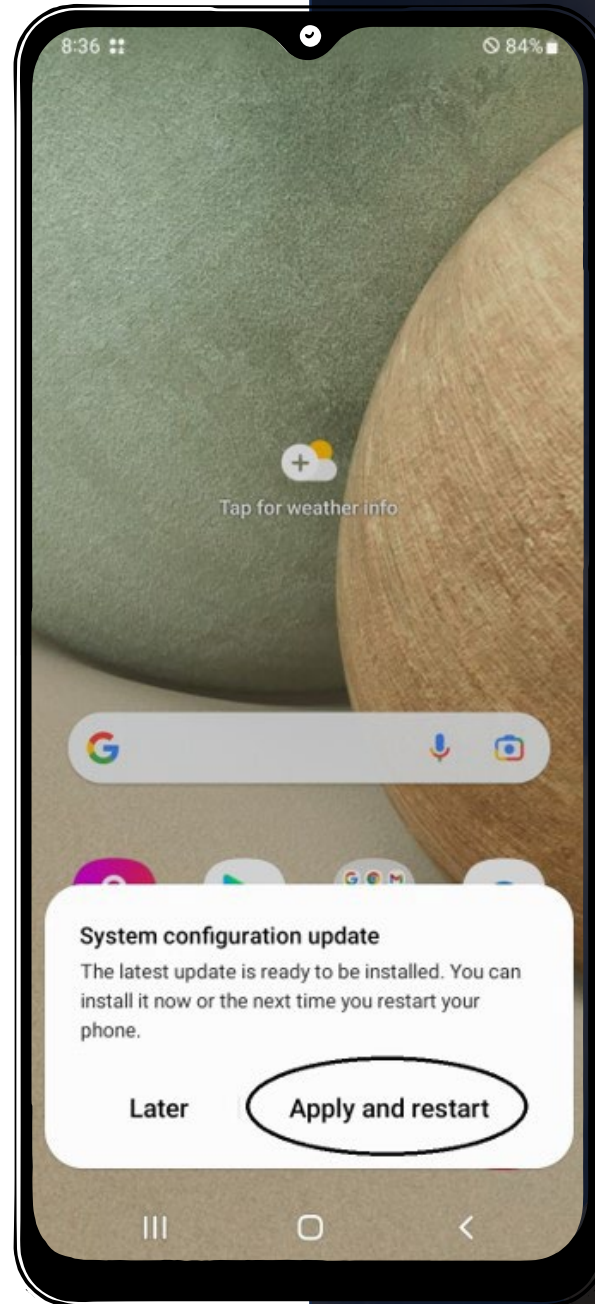


3. Select Apply & Restart

Tap the notification to begin installing the configuration update.

INLAND CELLULAR

A12 Update

How-To Guide

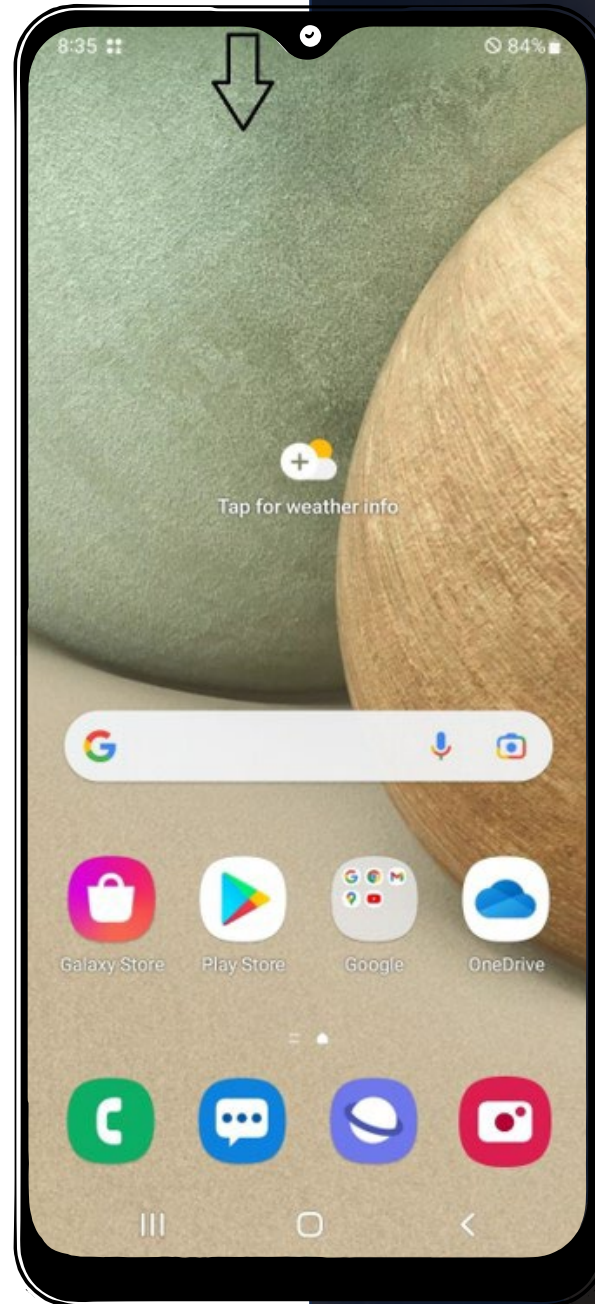


4. Swipe Down from the Top of Device

After your device restarts swipe down from the top of the screen again to access the notifications tray.

INLAND CELLULAR

A12 Update

How-To Guide

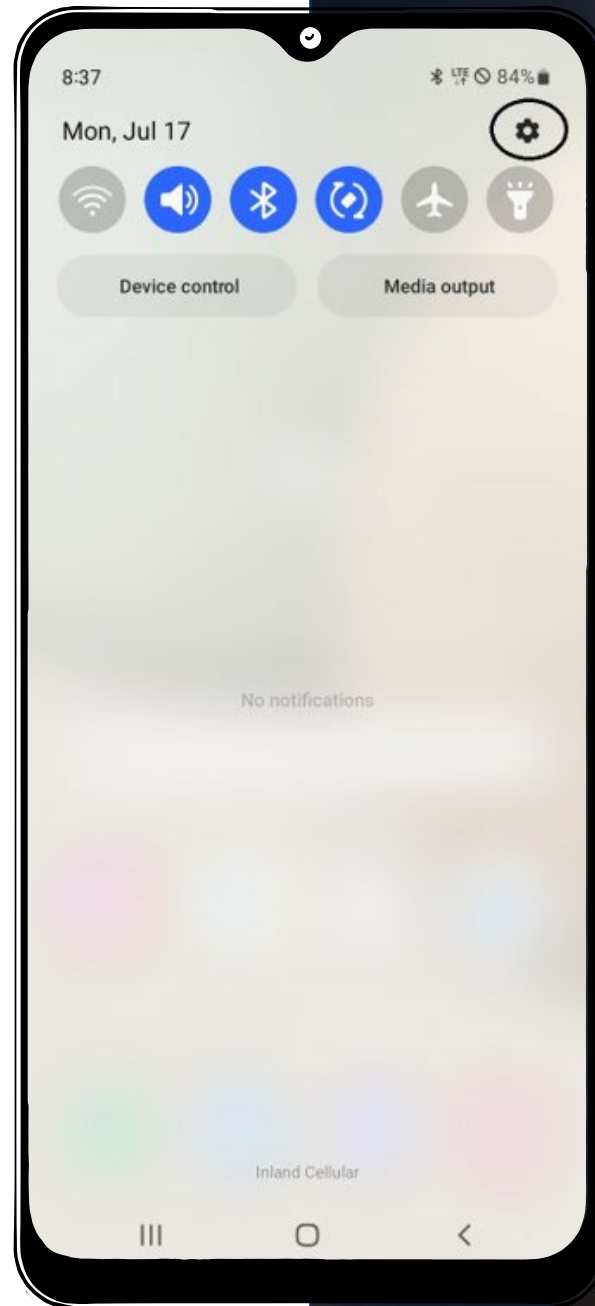


5. Access Settings

Tap the gear icon in the upper right corner to access your settings menu.

INLAND CELLULAR

A12 Update

How-To Guide

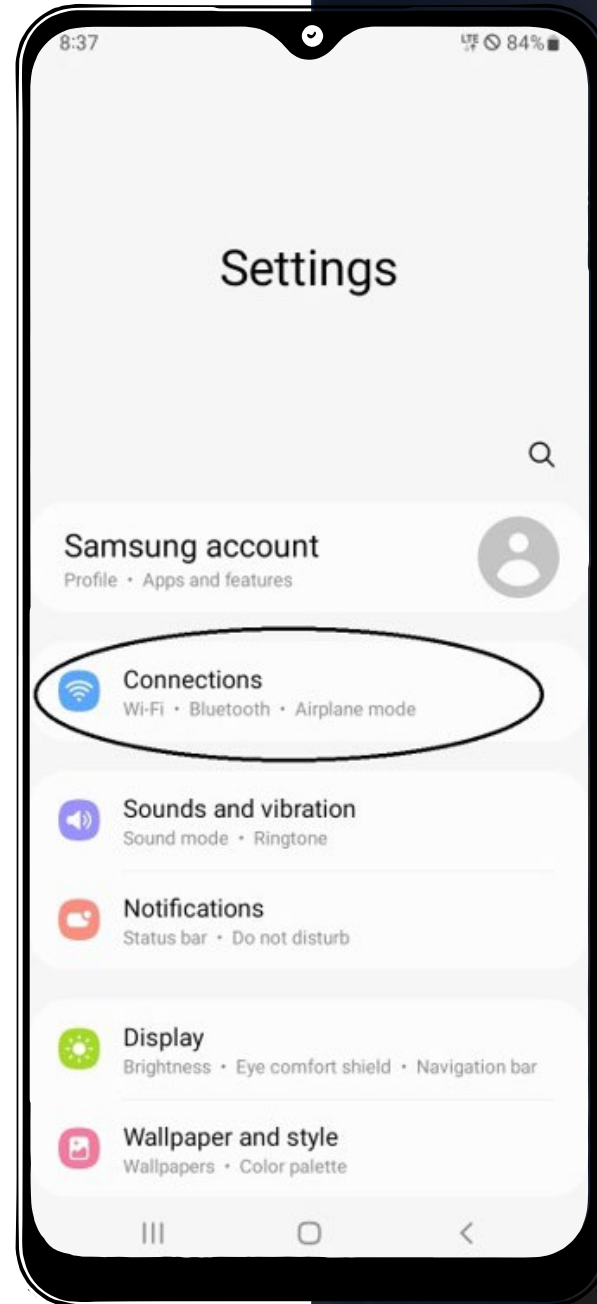


6. Choose Connections

INLAND CELLULAR

A12 Update

How-To Guide

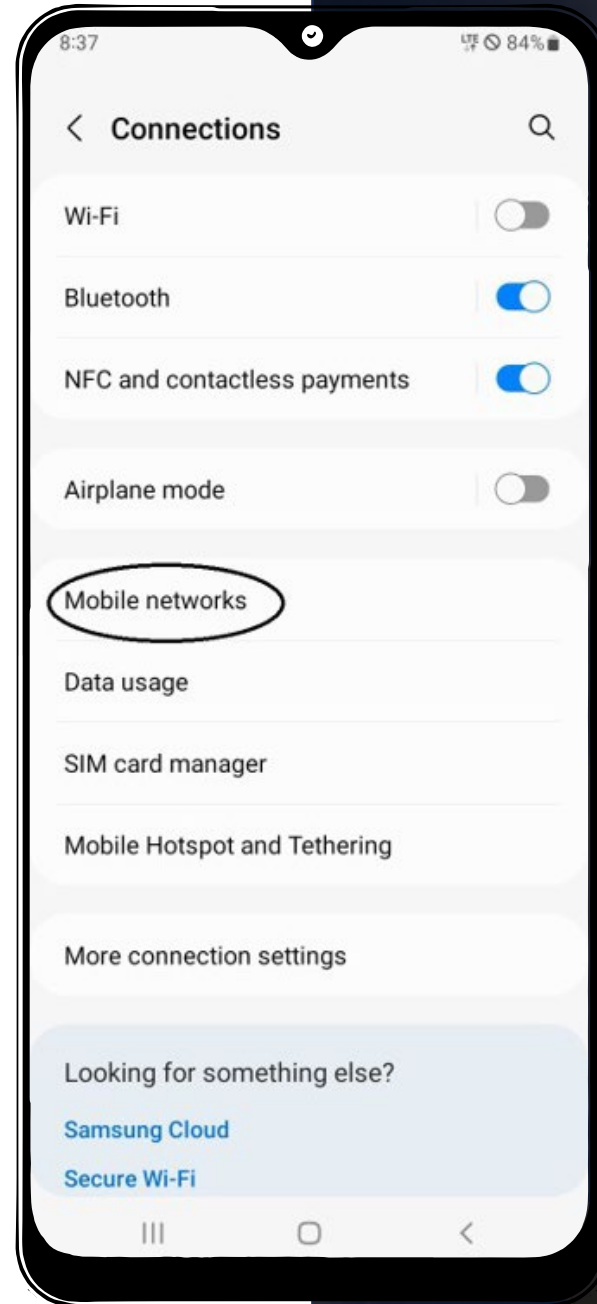


7. Select Mobile Networks

INLAND CELLULAR

A12 Update

How-To Guide

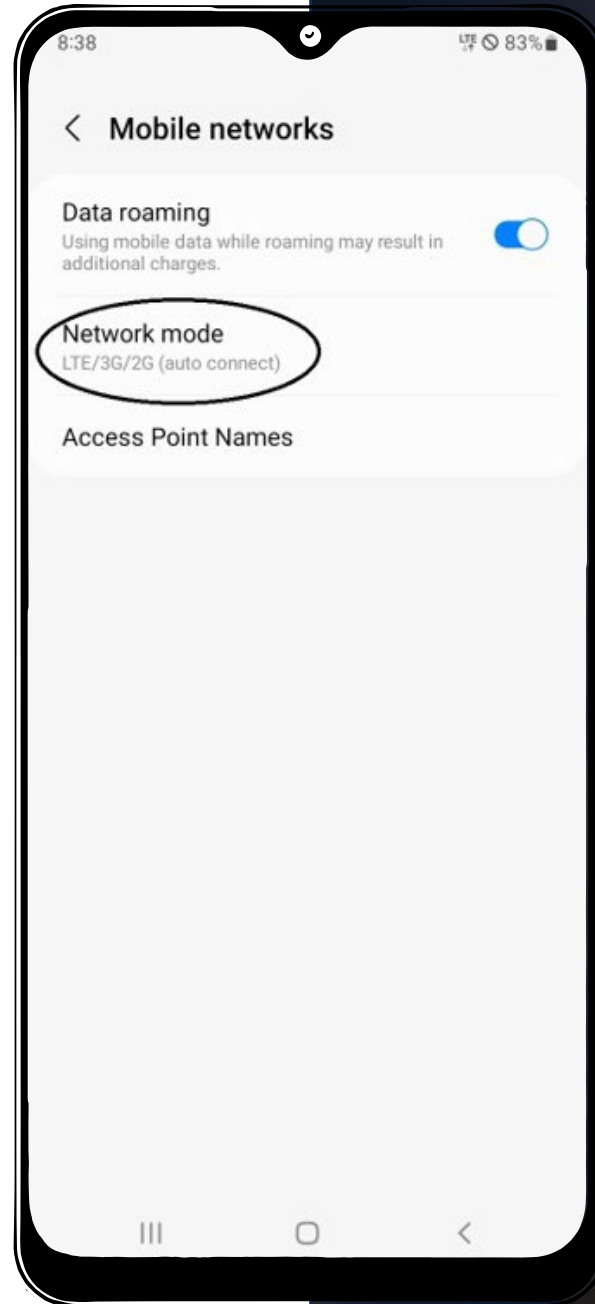


8. Change Network Mode to Global

Tap Network Mode LTE/3G/2G (auto connect) and change this setting to GLOBAL

INLAND CELLULAR

A12 Update

How-To Guide

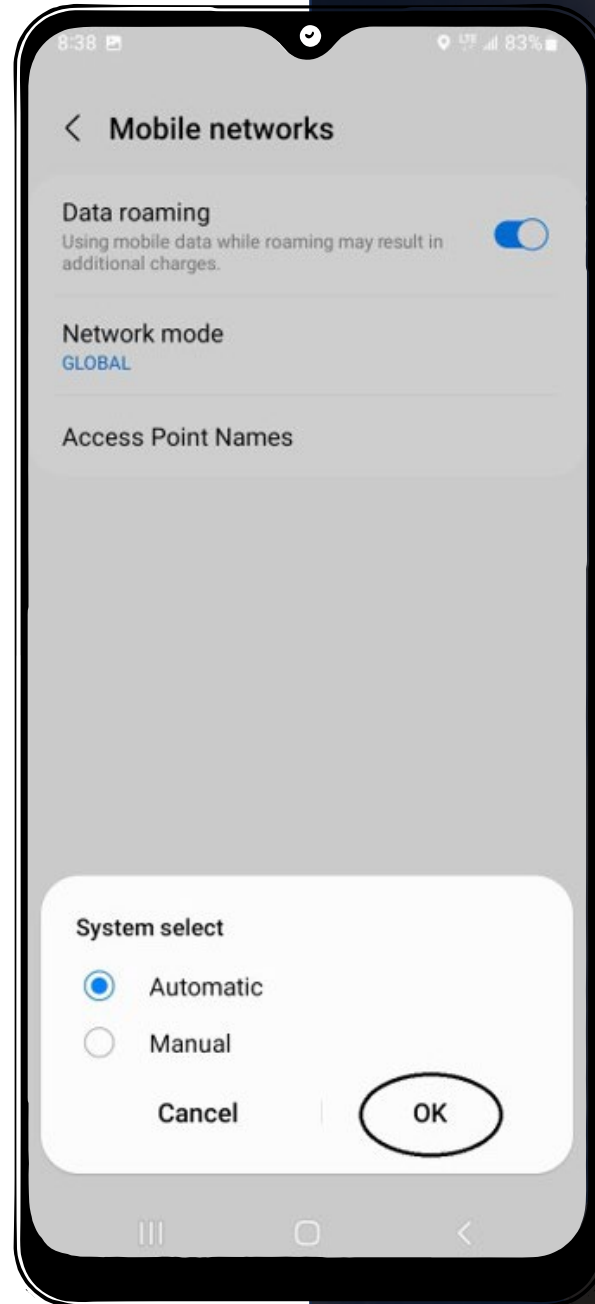


9. Keep Automatic System Select

After selecting GLOBAL you will see a pop up with system select, leave Automatic selected and tap "OK"

INLAND CELLULAR

A12 Update

How-To Guide

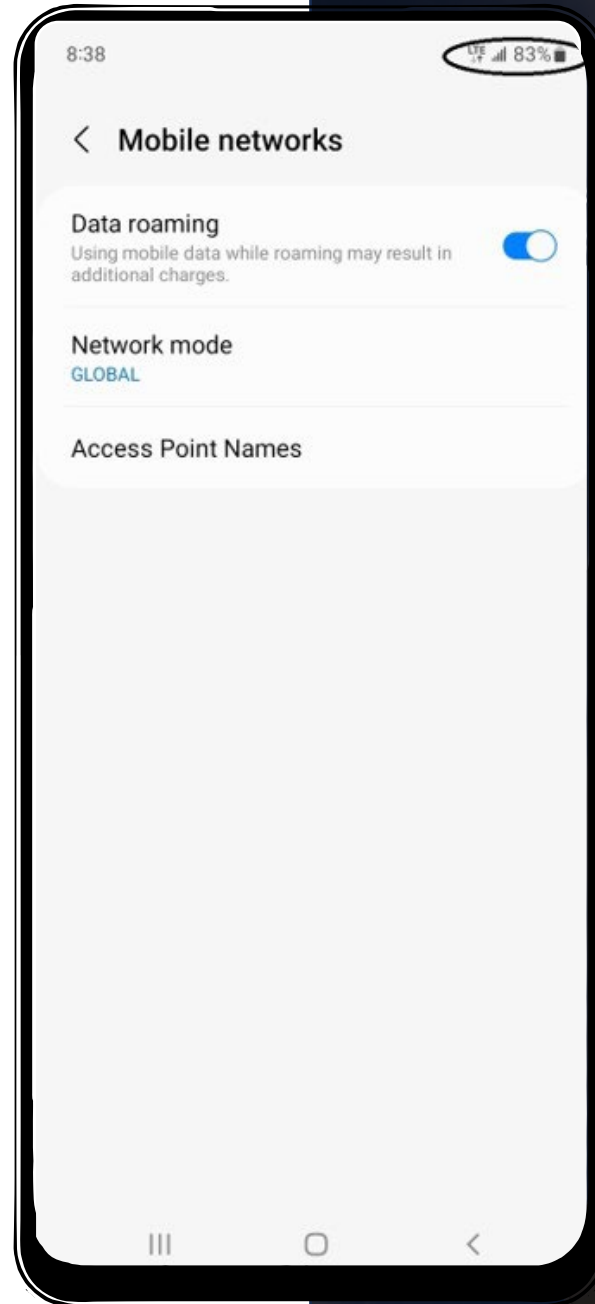

10. Check Service

Your device will then register on the network and you will see signal bars and connectivity icons displayed on the top of your device.

INLAND CELLULAR