


1. Swipe Down from the Top of Device

Swipe down from the top your device and a menu will open displaying your notification tray.


INLAND CELLULAR

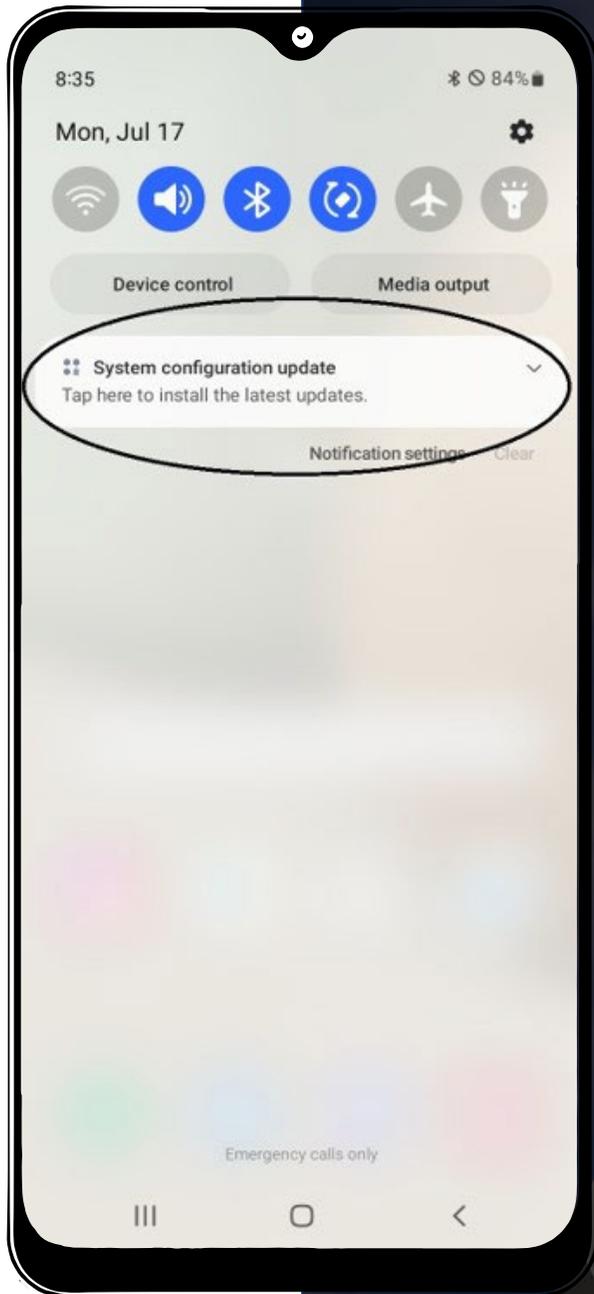

2. Install Configuration Update


Tap the notification to begin installing the configuration update

INLAND CELLULAR

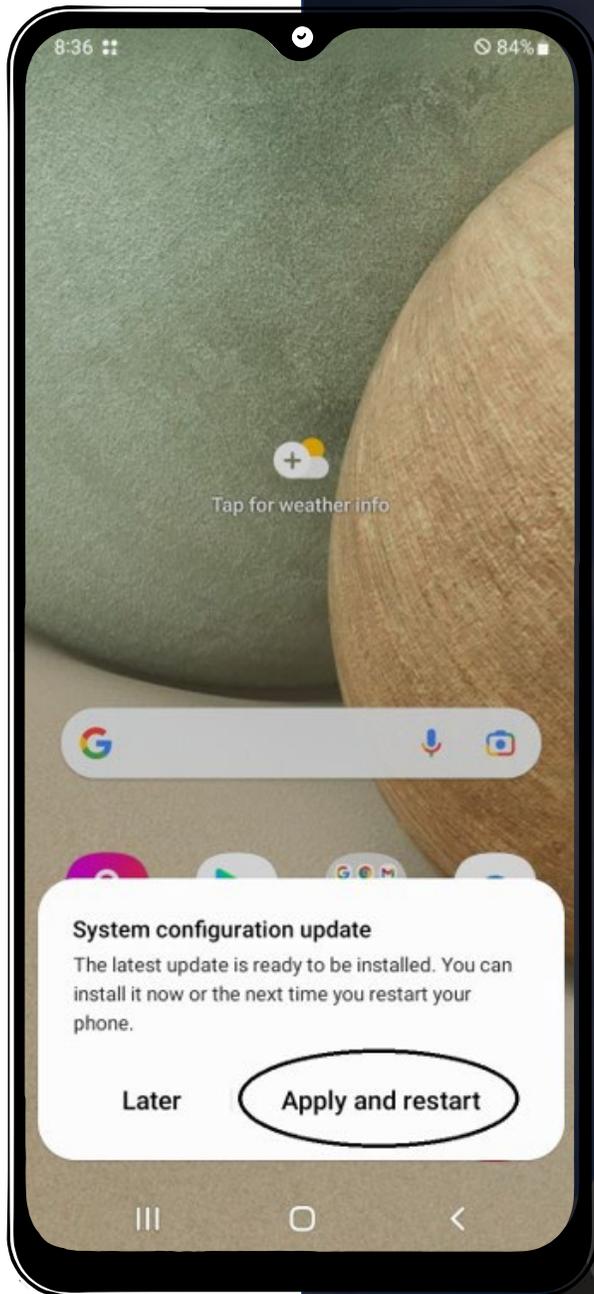

3. Select Apply & Restart
Tap the notification to begin installing the configuration update.


INLAND CELLULAR

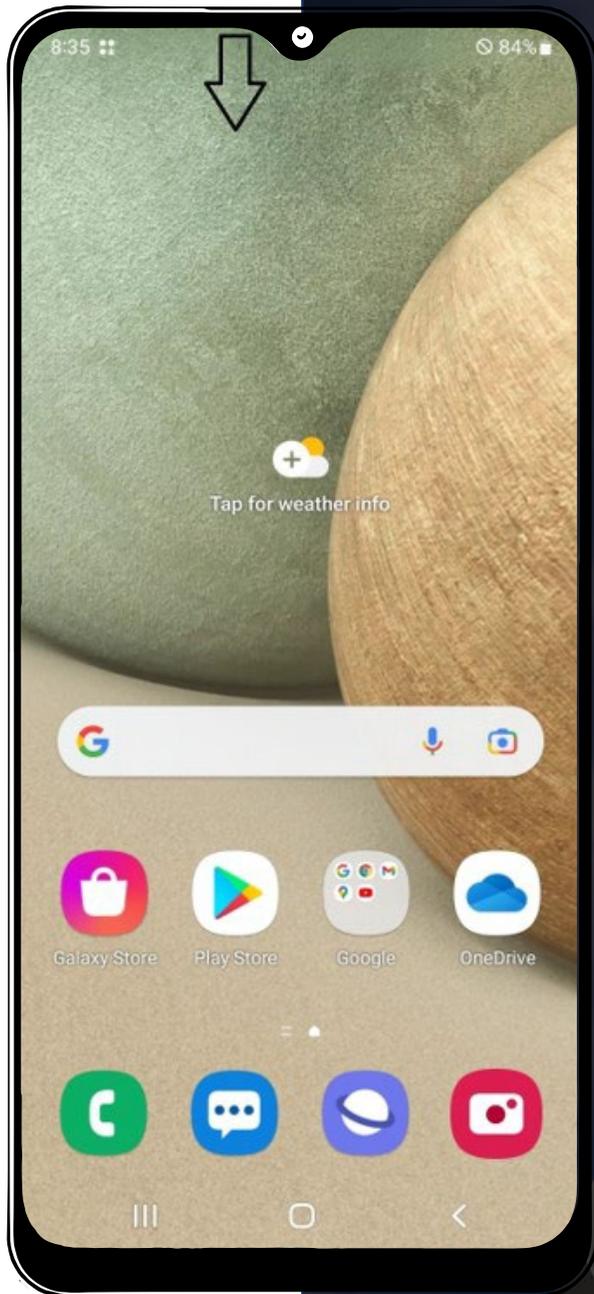

4. Swipe Down from the Top of Device

After your device restarts swipe down from the top of the screen again to access the notifications tray.


INLAND CELLULAR

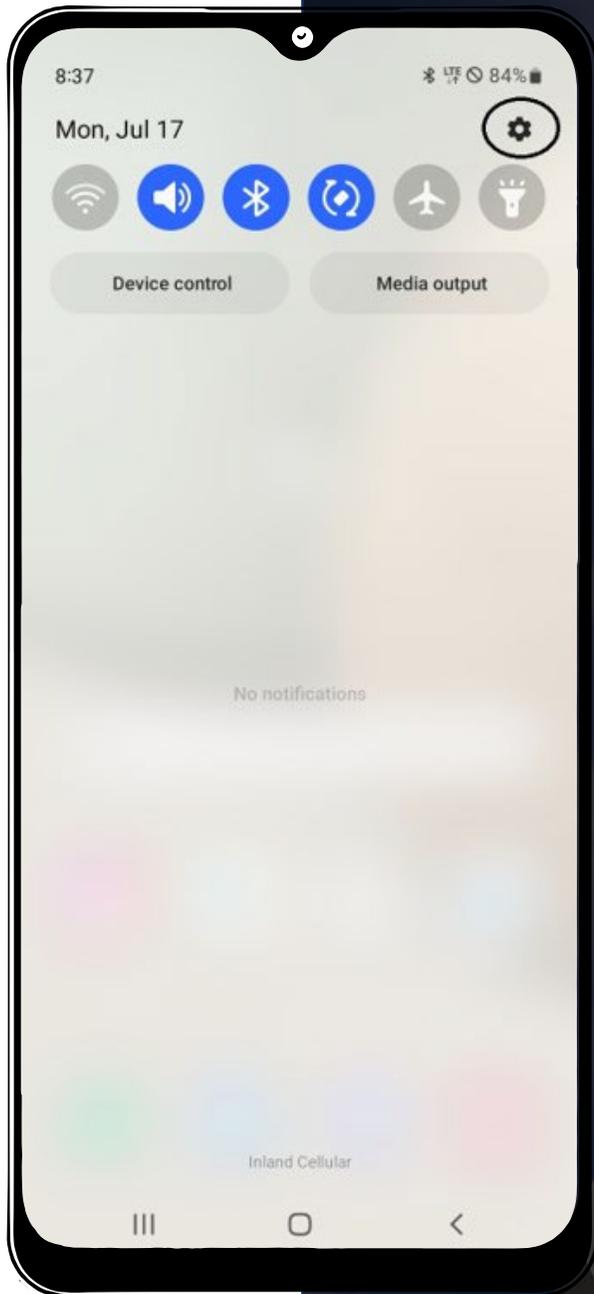

5. Access Settings

Tap the gear icon in the upper right corner to access your settings menu.

INLAND CELLULAR

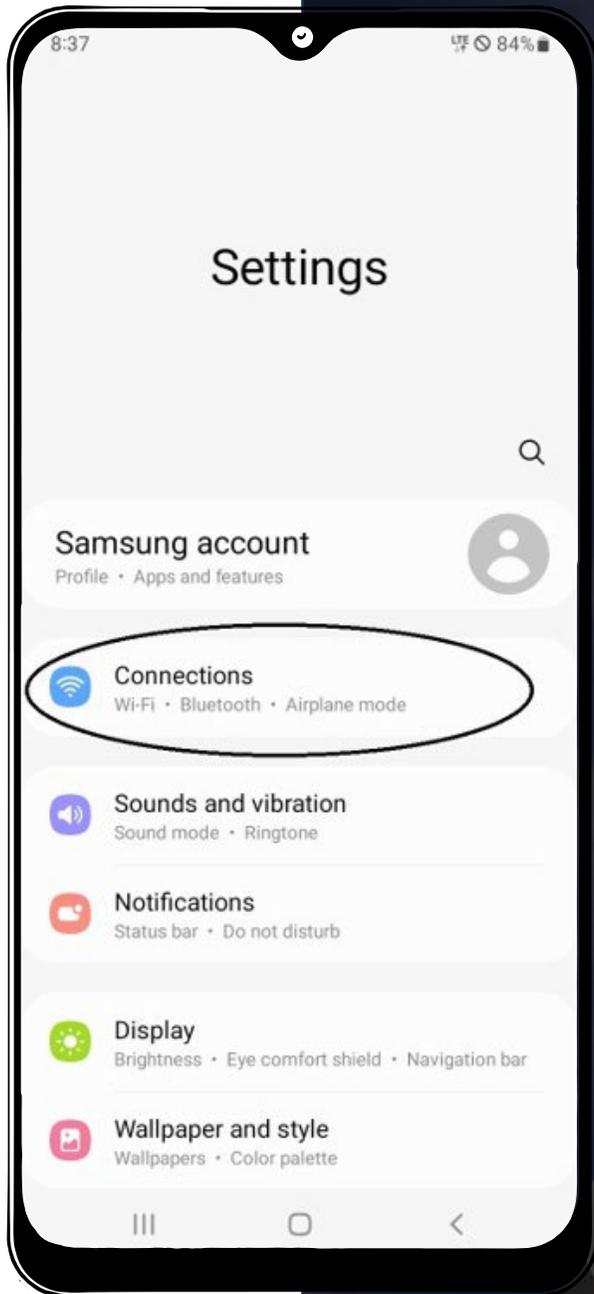

Settings

Samsung account

Profile • Apps and features



Connections

Wi-Fi • Bluetooth • Airplane mode



Sounds and vibration

Sound mode • Ringtone



Notifications

Status bar • Do not disturb



Display

Brightness • Eye comfort shield • Navigation bar




Wallpaper and style

Wallpapers • Color palette


6. Choose Connections

INLAND CELLULAR

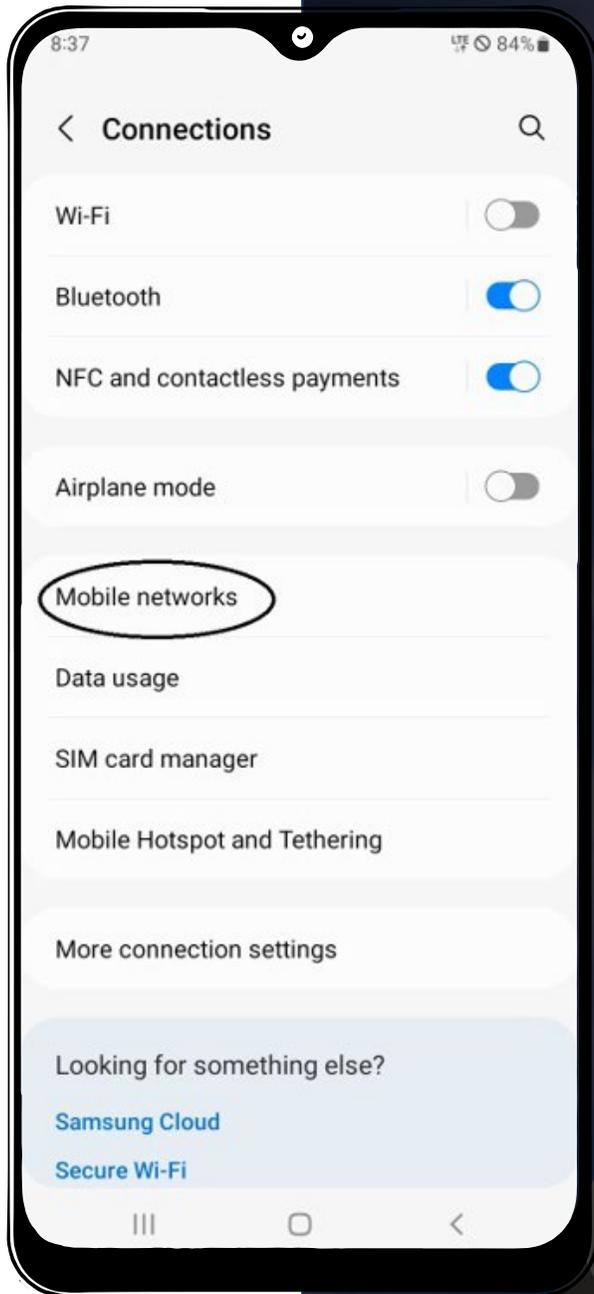

7. Select Mobile Networks


INLAND CELLULAR

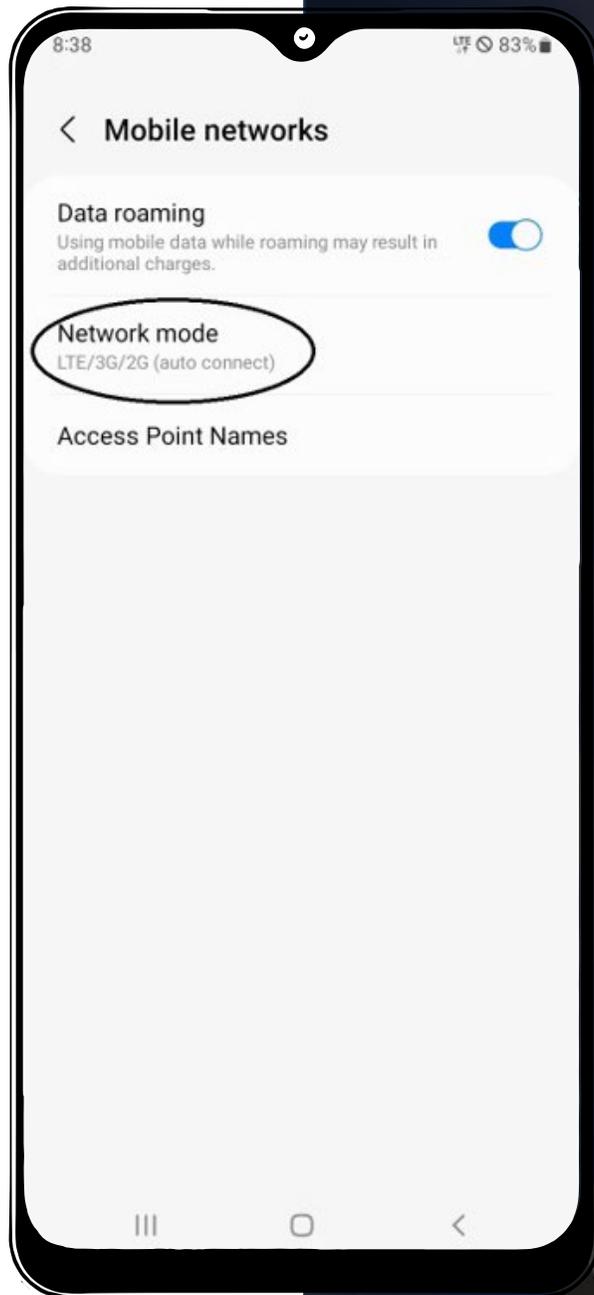

8. Change Network Mode to Global

Tap Network Mode LTE/3G/2G (auto connect) and change this setting to GLOBAL


INLAND CELLULAR

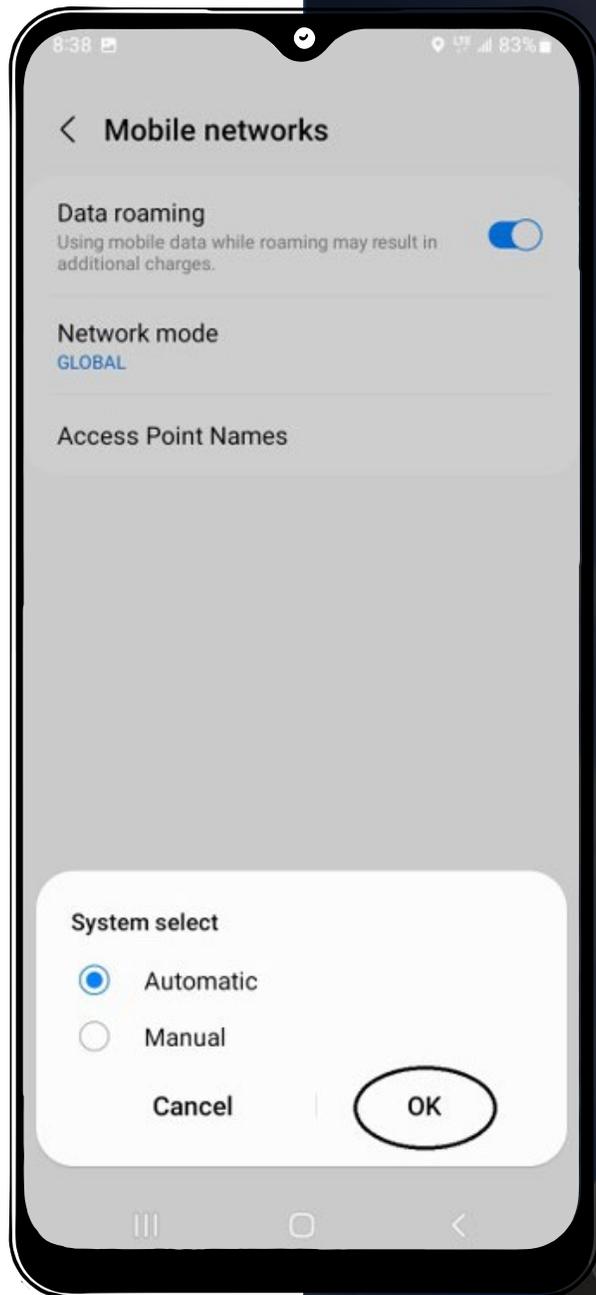

9. Keep Automatic System Select

After selecting GLOBAL you will see a pop up with system select, leave Automatic selected and tap "OK"

INLAND CELLULAR

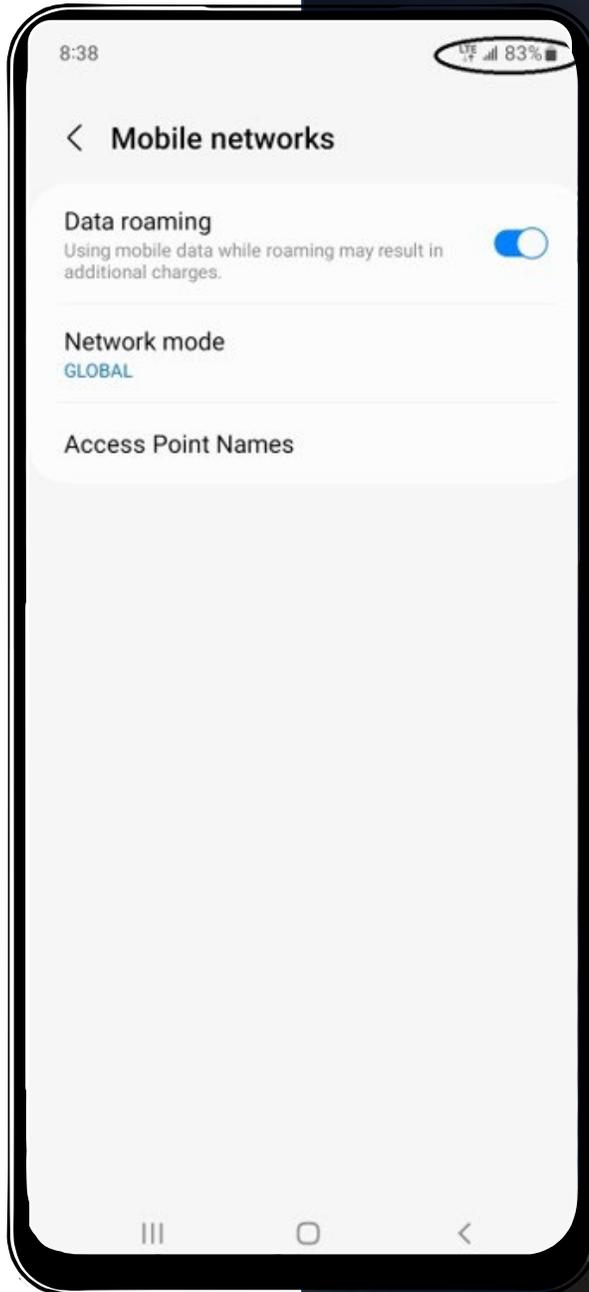

10. Check Service

Your device will then register on the network and you will see signal bars and connectivity icons displayed on the top of your device.

INLAND CELLULAR